

# OPERATING INSTRUCTIONS, CARE INSTRUCTIONS

IDEAL FOR HOLIDAY TIME.  
IDEAL ALL YEAR ROUND.

- **Fast, easy assembly.**
- **The plants stay in their normal positions.**
- **No repotting necessary.**
- **Fully automatic and requirement-based.**
- **At the weekend, on holiday, all year round.**

## FULLY AUTOMATIC WATERING FOR INDOOR PLANTS

Blumat Classic is the reliable watering system for indoor plants. The water is sucked out of any container and distributed into the soil via the clay cone. This works automatically; the plants take what they need. Also suitable for the watering of balcony plants when you're on holiday in the XL version.

## INSTALLATION



Remove green cap.




Fill the clay cone up to the brim with water.



Press the cap on the completely full clay cone.



Insert the into the soil near the roots. The clay cone must be completely under the soil.

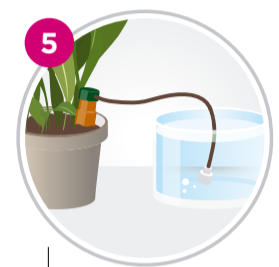


Place the tube in a water container. Ready!

Keep the water container topped up. If the water container should run empty, the Blumat will also have to be refilled.


## WATER DISCHARGE

The water discharge can be regulated by placing the water container higher or lower.

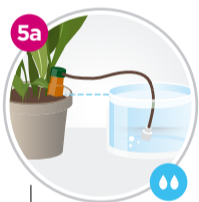


**Classic**  
ca. 75ml/24h  
**ClassicXL**  
ca. 125ml/24h

The water level in the water container is slightly below the green Blumat cap. This is the ideal position, water is dispensed according to the degree of moisture in the soil. Water discharge is **approx. 75 ml / 24 h or 125 ml / 24 h (XL)**.

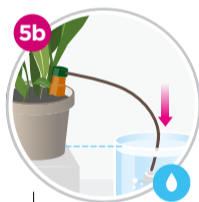

**Classic**  
ca. 50ml/24h  
**ClassicXL**  
ca. 75ml/24h

The water level in the water container is significantly lower than the green Blumat cap. Watering takes place depending on the moisture level of the soil, with reduced water discharge of **approx. 50 ml / 24 h or 75 ml / 24 h (XL)**.

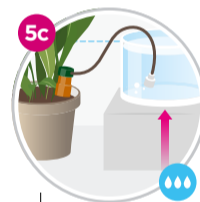

**Classic**  
ca. 150ml/24h  
**ClassicXL**  
ca. 200ml/24h

The water level in the water container is higher than the green cap. The Blumat Classic discharges water constantly, even when the soil is moist enough. **Water discharge is up to 150 ml / 24 h or 200 ml / 24 h (XL)**. Attention: This setting can lead to over-watering; always use a sufficiently large saucer!

Several Blumat Classics can be used in one container if a plant has a higher water requirement. It is best to watch Blumat Classic for a while (1 or 2 weeks) to find the optimum setting.

## WORTH KNOWING

**Fruit and vegetables:** Blumat Classic can be used to water fruit and vegetables without any worries. All Blumat Classic products have been tested in accordance with the Austrian drinking water directive and are below all specified limits. **Blumat Classic products are free from BPA, PFAS and phthalates.**

**Long-term watering:** It is best to use opaque containers as this prevents algae growth. In addition, water the plants every 4-6 weeks with a watering can.

**Fertilising:** This is no problem, just add a little liquid fertiliser by pouring some into the water container (see the manufacturer's dosing instructions).

**Maintenance:** Blumat Classic will last longer if it is thoroughly cleaned once a year. Open the Blumat Classic and soak both parts in warm water for about 5 minutes. Remove visible deposits from the inside with a small brush or wooden spatula and rinse out. Then press the cap on firmly several times under water to flush any impurities out of the tube. Remove deposits from the outside of the clay cone with sandpaper.

**Warranty:** We want you to be satisfied. All Blumat products are covered by a 3-year warranty from the date of purchase. Should you not be entirely satisfied, please contact your retailer or us directly (info@blumat.at).

## 3-YEAR GUARANTEE.